

Exhaust Servo Eliminator Supplementary Manual




BMW S1000RR ABS TC 2019- (ESE-BM1)

Secure the bike on a stand.



Locate the exhaust servo motor.

(At the right footpeg)

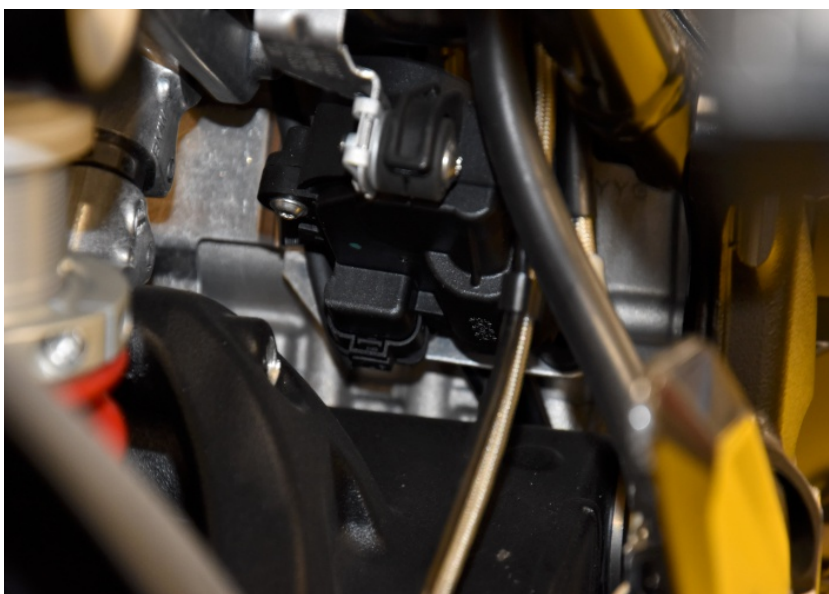

Unplug the exhaust servo motor
connector and remove the exhaust servo
motor.

(Black, 4-pole connector)




Exhaust Servo Eliminator Supplementary Manual



BMW S1000RR ABS TC 2019- (ESE-BM1)

Plug the ESE connectors to the exhaust servo motor connectors.

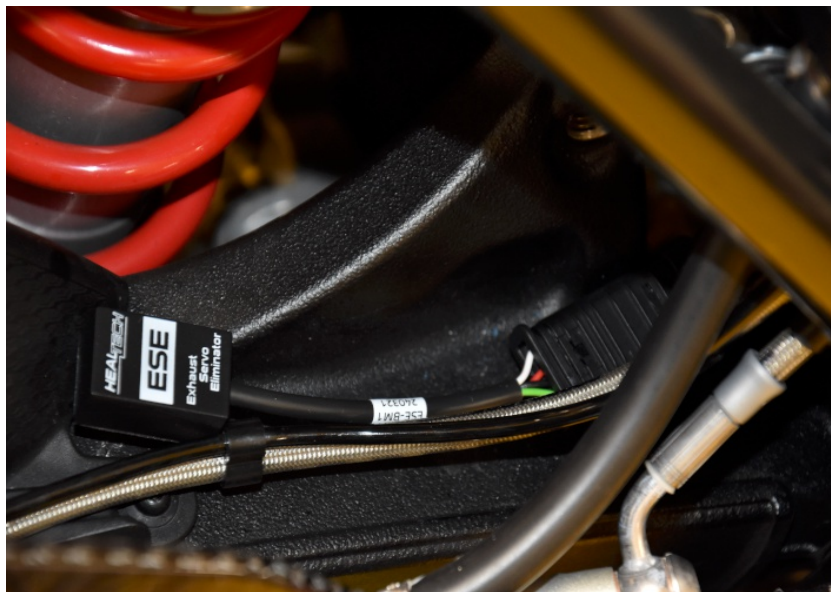

Typical position for the Exhaust Servo Eliminator module.

Secure the unit properly.

