

Exhaust Servo Eliminator Supplementary Manual



BMW S1000XR ABS TC 2016- (ESE-BM1)

Secure the bike on a stand.



Locate the exhaust servo motor.

(At the right footpeg)



Unplug the exhaust servo motor
connector and remove the exhaust servo
motor.

(Black, 4-pole connector)



Exhaust Servo Eliminator Supplementary Manual



BMW S1000XR ABS TC 2016- (ESE-BM1)

Plug the ESE connectors to the exhaust servo motor connectors.



Typical position for the Exhaust Servo Eliminator module.

Secure the unit properly.

