

Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard ABS TC [Euro4] 2019-2022 (ESE-D01)

Secure the bike on a stand.




Remove the seat.



Locate and remove the exhaust servo motor.

Unplug the exhaust servo motor connectors.

(Black, 6-pole connectors under the seat)

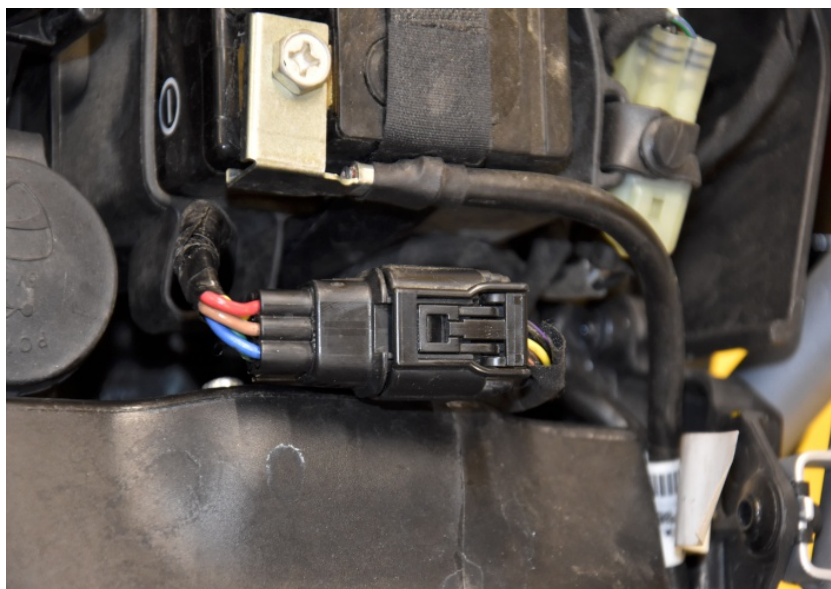

Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard ABS TC [Euro4] 2019-2022 (ESE-D01)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

