

Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard 2007-2012 (ESE-D02)

Secure the bike on a stand.



Remove the seat.



Locate and remove the exhaust servo motor.

Unplug the exhaust servo motor connectors.

(Transparent, 6-pole connectors under the seat)



Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard 2007-2012 (ESE-D02)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

