

Exhaust Servo Eliminator Supplementary Manual

Ducati Panigale V2 2020- (ESE-D04)

Secure the bike on a stand.



Remove the belly pan on the left side.



Locate the Exhaust Servo-motor and it's
black, 6-pole connector.



Exhaust Servo Eliminator Supplementary Manual

Ducati Panigale V2 2020- (ESE-D04)

Remove the Exhaust Servo-motor.



Plug the ESE connector to the Exhaust Servo-motor connector.



Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

