

Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard ABS TC [Euro5] 2022- (ESE-D05)

Secure the bike on a stand.



Remove the seat.



Locate and remove the exhaust servo motor.

Unplug the exhaust servo motor connector.

(Black, 6-pole connector under the seat)



Exhaust Servo Eliminator Supplementary Manual



Ducati Hypermotard ABS TC [Euro5] 2022- (ESE-D05)

Plug the ESE connector to the exhaust servo motor connector.

Secure the unit properly.

