

Exhaust Servo Eliminator Supplementary Manual



Honda VFR1200 2010-2014 (ESE-H02)

Remove the main seat.



Remove the frame cover from right side below seat.



Unplug the Exhaust Servo-motor connector.

Remove Exhaust Servo-motor.

(Black, 6-pole connector at right side)



Exhaust Servo Eliminator Supplementary Manual



Honda VFR1200 2010-2014 (ESE-H02)

Plug the ESE connector to the Exhaust Servo-motor connector.



Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

