

# Exhaust Servo Eliminator Supplementary Manual

## Honda CBR1000RR-R Fireblade SP 2020- (ESE-H05)


Remove the main and the passenger seat.

Remove the handrail and the fairing between the two seats.




Locate the Exhaust Servo motor.

*(Below the main seat.)*

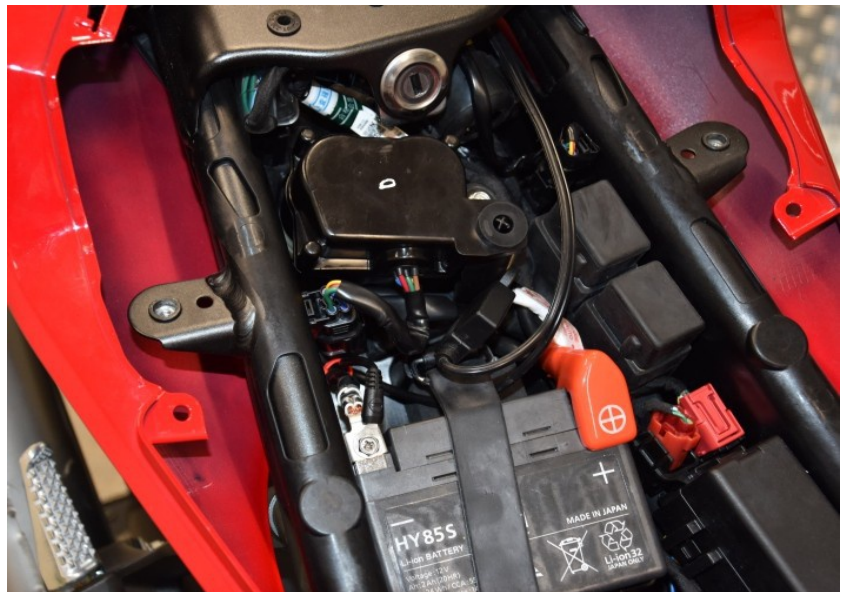

Remove the Exhaust Servo motor and locate the black, 6-pole connector.

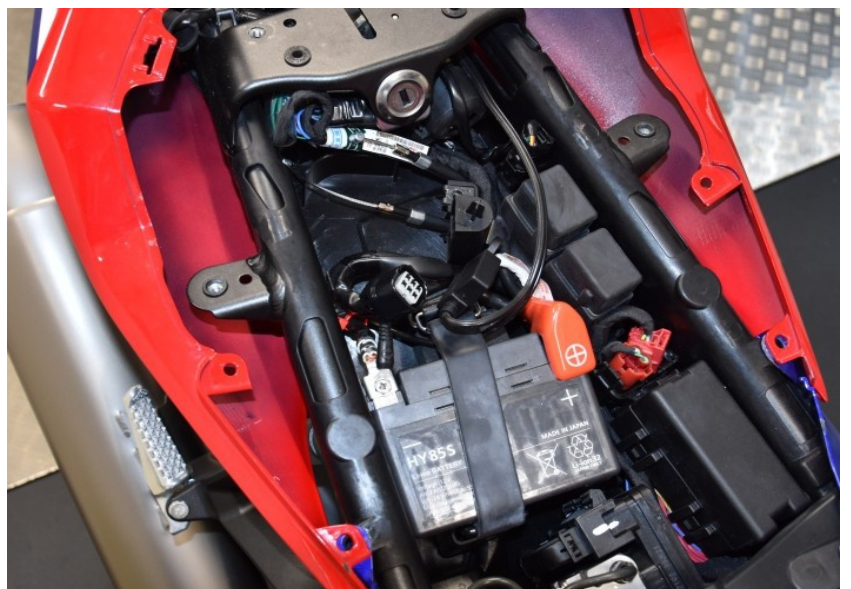

# Exhaust Servo Eliminator Supplementary Manual



## Honda CBR1000RR-R Fireblade SP 2020- (ESE-H05)

Plug the ESE connectors to the Exhaust Servo motor connectors.

Secure the unit properly.

