

# Exhaust Servo Eliminator Supplementary Manual

## Kawasaki ZX-10R Ninja 2006-2007 (ESE-K01)

Remove the Black frame covers below  
the main seat.

Remove the main and passanger seats.



Lift up or remove the tail cover.



Unplug the Exhaust Servo-motor  
connectors.

Remove the Exhaust Servomotor.

*(White, 3-pole triangular and Transparent,  
2-pole connectors below main seat)*



# Exhaust Servo Eliminator Supplementary Manual

## Kawasaki ZX-10R Ninja 2006-2007 (ESE-K01)

Plug the ESE connectors to the Exhaust Servo-motor connectors.



Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

