


Exhaust Servo Eliminator Supplementary Manual



Kawasaki ZX-10R Ninja 2008-2010 (ESE-K01)

Remove the Black frame covers below the main seat.


Remove the main seat.

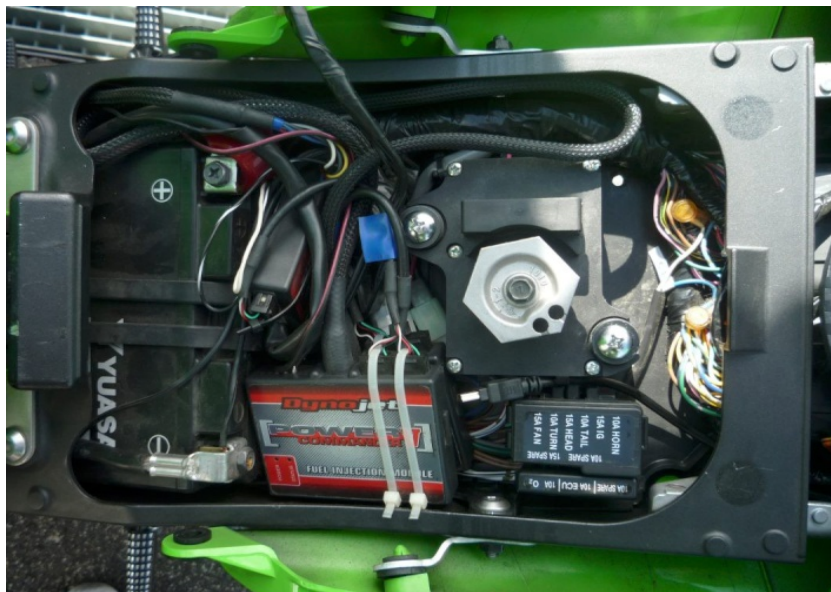


Unplug the Exhaust Servo-motor connectors.

Remove the Exhaust Servomotor.

(White, 3-pole triangular and Transparent, 2-pole connectors below main seat)

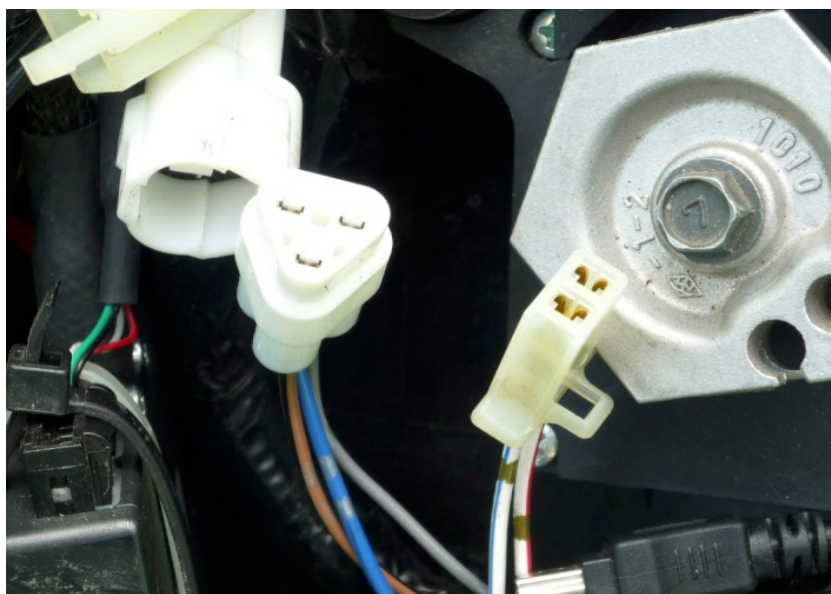

Plug the ESE connectors to the Exhaust Servo-motor connectors.

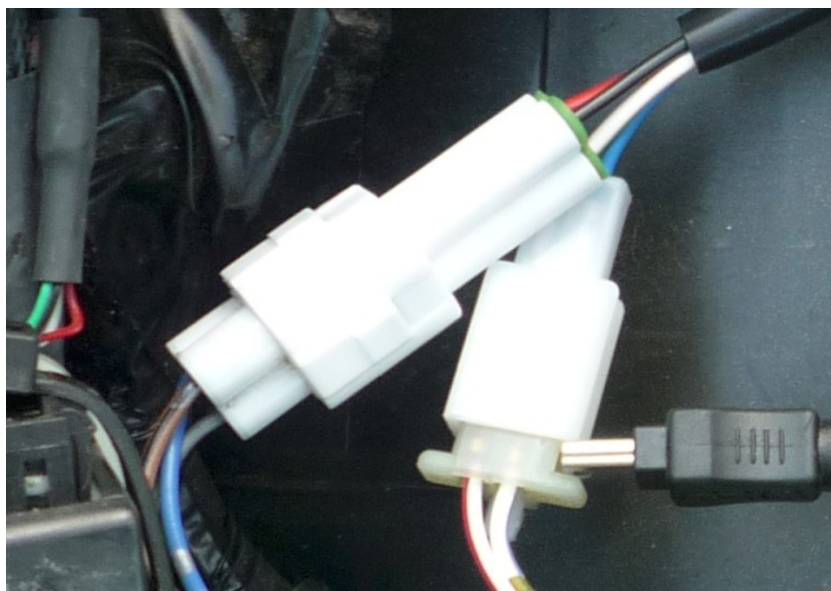

Exhaust Servo Eliminator Supplementary Manual



Kawasaki ZX-10R Ninja 2008-2010 (ESE-K01)

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

