

# Exhaust Servo Eliminator Supplementary Manual

## Kawasaki ZX-6R Ninja 2007-2008 (ESE-K01)

Remove the Black frame covers below main seat.


Remove the main and the passanger seat.

Remove the rear fairing below the passanger seat.




Remove the Exhaust Servo-motor.

*(Left side next to the frame)*

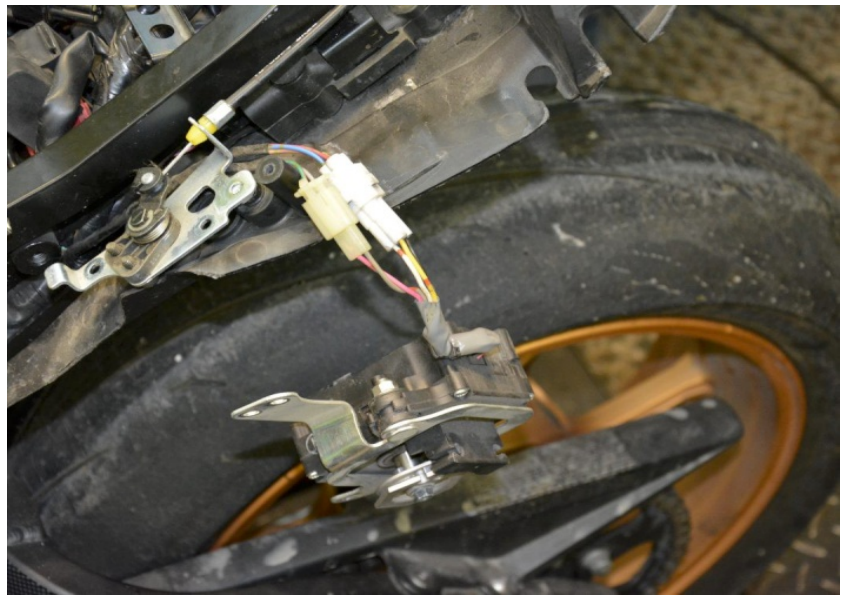

Unplug the Exhaust Servo-motor connectors.

*(White, 3-pole triangular and Transparent, 2-pole connectors below main seat)*

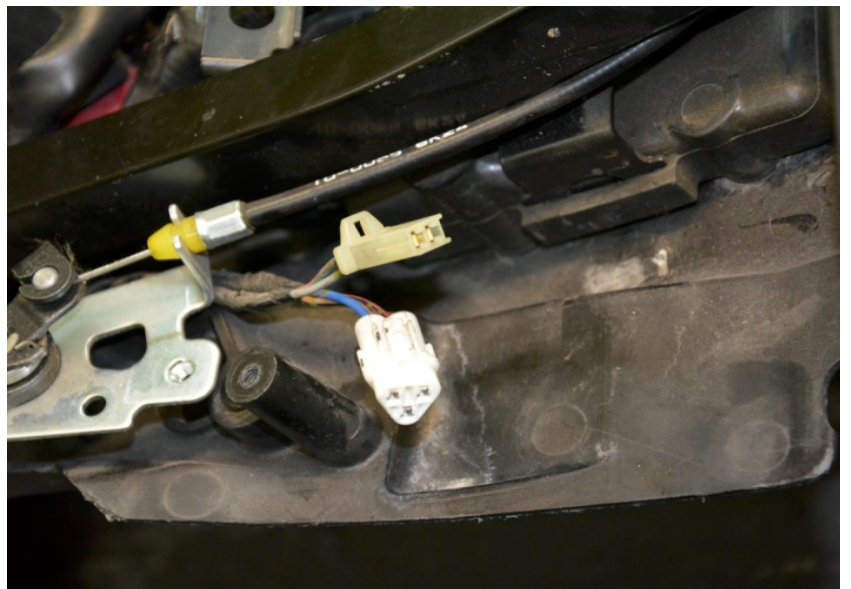

# Exhaust Servo Eliminator Supplementary Manual

## Kawasaki ZX-6R Ninja 2007-2008 (ESE-K01)

Plug the ESE connectors to the Exhaust Servo-motor connectors.



Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

