

Exhaust Servo Eliminator Supplementary Manual



Kawasaki ZX-6R Ninja 2009-2012 (ESE-K01)

Remove the Black frame covers below fuel tank.

Remove the main seat.



Remove Exhaust Servo-motor.

(Below the main seat.)



Plug the ESE connectors to the Exhaust Servo-motor connectors.

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

