

Exhaust Servo Eliminator Supplementary Manual



Kawasaki ZX-6R Ninja 2013-2015 (ESE-K01)

Remove the Black frame covers below the fuel tank.



Remove the main seat.



Remove the Exhaust Servo-motor.

(Below the main seat)



Exhaust Servo Eliminator Supplementary Manual



Kawasaki ZX-6R Ninja 2013-2015 (ESE-K01)

Unplug the Exhaust Servo-motor connectors.

(White, 3-pole triangular and Transparent, 2-pole connectors below main seat)



Plug the ESE connectors to the Exhaust Servo-motor connectors.



Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

