

Exhaust Servo Eliminator Supplementary Manual

Suzuki B-King 2008-2012 (ESE-S01)

Secure the bike on a stand.



Remove the seats.

Remove the covers from the fuel tank.

Remove the fuel tank.



Locate the Exhaust Servo-motor under
the fuel tank.

Remove the exhaust servo motor and
unplug the connectors.



Exhaust Servo Eliminator Supplementary Manual



Suzuki B-King 2008-2012 (ESE-S01)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

