

Exhaust Servo Eliminator Supplementary Manual



Suzuki M1800R Intruder 2006-2011 (ESE-S01)

Remove the main seat.



Remove the frame cover below main seat on the right side.



Remove the swing arm cover on the right side.



Exhaust Servo Eliminator Supplementary Manual



Suzuki M1800R Intruder 2006-2011 (ESE-S01)


Unplug the Exhaust Servo-motor connectors.

Remove the Exhaust Servo-motor.

(Black, 3-pole connector and Transparent, 2-pole connector below the swing arm cover on the left side)



Plug the ESE connectors to the Exhaust Servo-motor connectors.

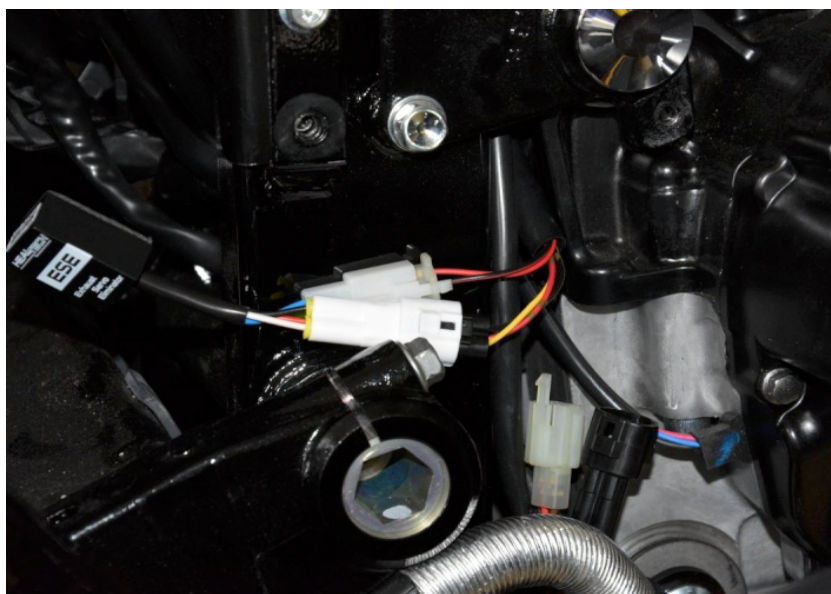

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

