

Exhaust Servo Eliminator Supplementary Manual



Triumph Speed Triple 1200 RR ABS TC 2021- (ESE-T03)

Secure the bike on a stand.



Locate the exhaust servo motor.

(At the right footpeg)



Unplug the exhaust servo motor connector and remove the exhaust servo motor.



Exhaust Servo Eliminator Supplementary Manual



Triumph Speed Triple 1200 RR ABS TC 2021- (ESE-T03)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

