

Exhaust Servo Eliminator Supplementary Manual



Yamaha MT-01 2005-2012 (ESE-Y01)

Remove the seat.

Remove the fuel tank.



Unplug the Exhaust Servo-motor
connector.

Remove the Exhaust Servo-motor.

(Black, 6-pole connector behind engine)



Plug the ESE connector to the Exhaust
Servo-motor connector.



Exhaust Servo Eliminator Supplementary Manual



Yamaha MT-01 2005-2012 (ESE-Y01)

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

