

Exhaust Servo Eliminator Supplementary Manual



Yamaha R1 2007-2008 (ESE-Y01)


Remove the lower fairing on the left side.



Unplug the Exhaust Servo-motor connector.

Remove the Exhaust Servo-motor.

(Black, 6-pole connector behind the side stand)

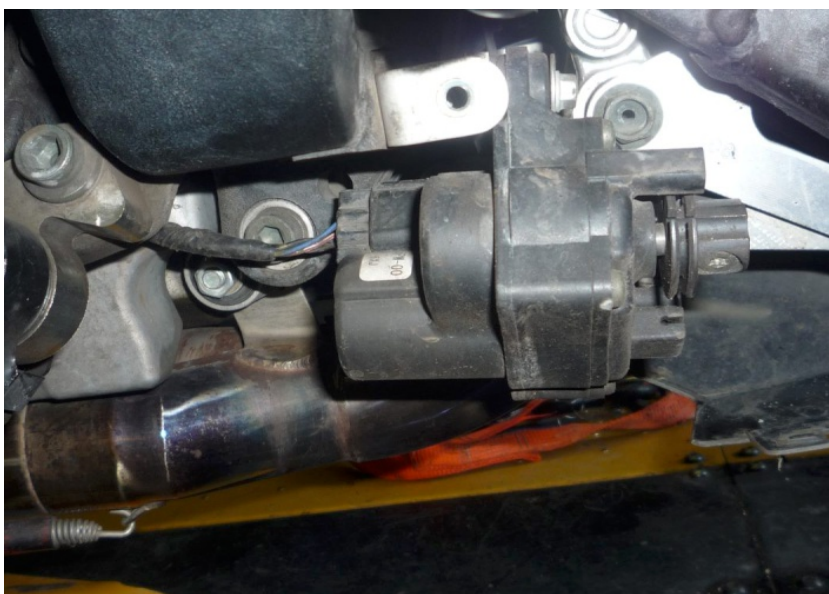

Plug the ESE connector to the Exhaust Servo-motor connector.



Exhaust Servo Eliminator Supplementary Manual



Yamaha R1 2007-2008 (ESE-Y01)

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

