

Exhaust Servo Eliminator Supplementary Manual

Yamaha WR250X 2006-2010 (ESE-Y01)

Remove the seat.



Remove the frame cover at left side
below the seat.



Remove the Exhaust Servo-motor.



Exhaust Servo Eliminator Supplementary Manual

Yamaha WR250X 2006-2010 (ESE-Y01)

Unplug the Exhaust Servo-motor
connector.

(Black, 6-pole connector)



Plug the ESE connector to the Exhaust
Servo-motor connector.



Typical position for the Exhaust Servo
Eliminator.

Secure the unit properly.

