

Exhaust Servo Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2016 (ESE-Y01)

Secure the bike on a stand.



Remove the seats.

Lift up or remove the fuel tank.



Locate and remove the Exhaust
Servo-motor.

Plug the ESE connectors to the exhaust
servo motor connectors.

(Black, 6-pole connector)



Exhaust Servo Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2016 (ESE-Y01)

Typical position for the Exhaust Servo Eliminator.

Secure the unit properly.

