## **GIPRO X-TYPE GEAR INDICATOR**

# Supplementary Manual



### Yamaha FZ6 Fazer 2004-2008 (GPXT + GPX-Y01)

Remove the main seat.



Lift up or remove the fuel tank.



Plug the GPX connectors in-line with the speed sensor connectors.

(White, 3-pole triangular connectors in dust boot below the fuel tank)



### **GIPRO X-TYPE GEAR INDICATOR**


## Supplementary Manual



#### Yamaha FZ6 Fazer 2004-2008 (GPXT + GPX-Y01)

Connect the GPX Black/Green wire to the Gray wire of the crankshaft position sensor connector.

(Black, 2-pole connector at the right side below the fuel tank)

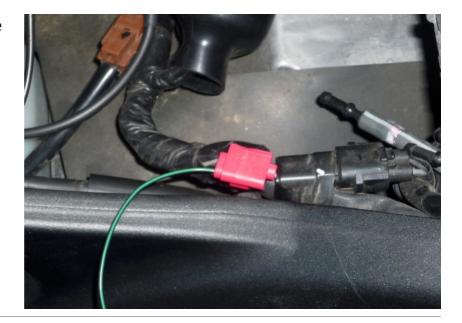

Connect the GPX Red wire to the Brown wire of the rear brakelight switch connector.

(Brown, 2-pole connector below the fuel tank)



Typical position for the gear indicator.

Secure the unit properly.

