

Oxygen Sensor Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2020 (OSE-07)

Secure the bike on a stand.




Remove the seats and the side covers.

Lift up or remove the fuel tank.



Locate and unplug the oxygen sensor
connector under the fuel tank.

(Black, 4-pole connector)

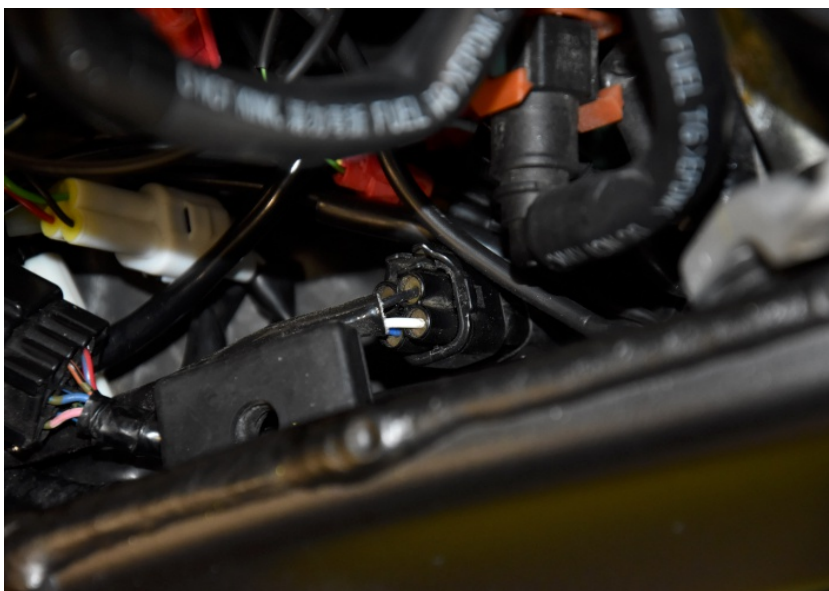

Oxygen Sensor Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2020 (OSE-07)

Plug the OSE connector into the wiring harness connector.

Secure the unit properly.

