PS Eliminator

Supplementary Manual



Kawasaki ZX-6R ABS TC 2019- (PSE-01)

Secure the bike on a stand.



Remove the seat.


Remove the covers from the fuel tank.

Remove the fuel tank and the airbox.



Locate the stock PAIR (clean air) valve and unplug the connector.

(White, 2-pole connector under the airbox.)

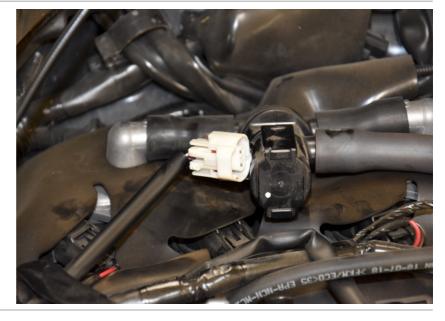

PS Eliminator

Supplementary Manual



Kawasaki ZX-6R ABS TC 2019- (PSE-01)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

