

# PS Eliminator Supplementary Manual



## Suzuki B-King 2008-2012 (PSE-01)

Secure the bike on a stand.



Remove the seats.

Remove the covers from the fuel tank.

Remove the fuel tank and the airbox.



Locate the stock PAIR (clean air) valve  
and unplug the connector.

*(Black, 2-pole connector under the airbox.)*



# PS Eliminator Supplementary Manual



## Suzuki B-King 2008-2012 (PSE-01)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

