

PS Eliminator Supplementary Manual



Suzuki DL1050 ABS TC 2020- (PSE-01)

Secure the bike on a stand.




Remove the seats.

Remove the fuel tank covers.


Remove the side fairings.

Remove the fuel tank and the airbox.

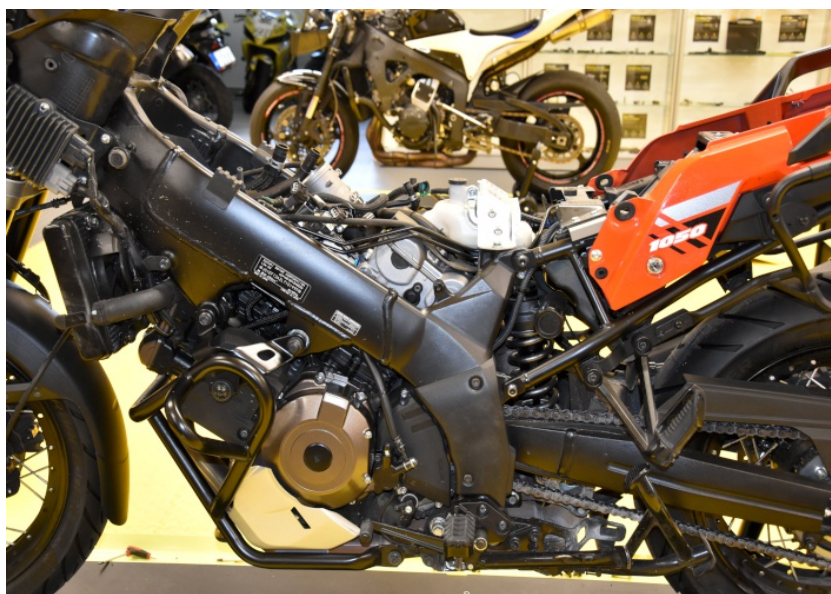

Locate the stock PAIR (clean air) valve under the airbox on the right side and unplug the connector.

(Black, 2-pole connector.)

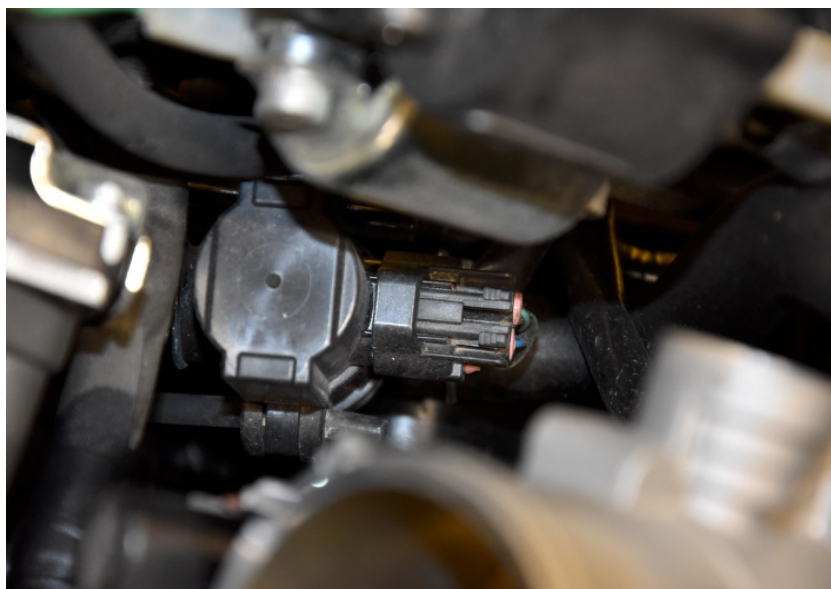

PS Eliminator Supplementary Manual



Suzuki DL1050 ABS TC 2020- (PSE-01)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

