

PS Eliminator Supplementary Manual



Suzuki GSX-R1000R 2017- (PSE-01)

Secure the bike on a stand.



Remove the seats and the side covers.

Remove the fuel tank and the airbox.



Locate the stock PAIR (clean air) valve
and unplug the connector.

(Black, 2-pole connector under the airbox.)



PS Eliminator Supplementary Manual



Suzuki GSX-R1000R 2017- (PSE-01)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

