

PS Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2016 (PSE-01)

Secure the bike on a stand.



Remove the seats.


Lift up or remove the fuel tank, remove the airbox.



Locate the stock PAIR (clean air) valve and unplug the connector.

Remove the PAIR (clean air) valve.

(Blue, 2-pole connector)

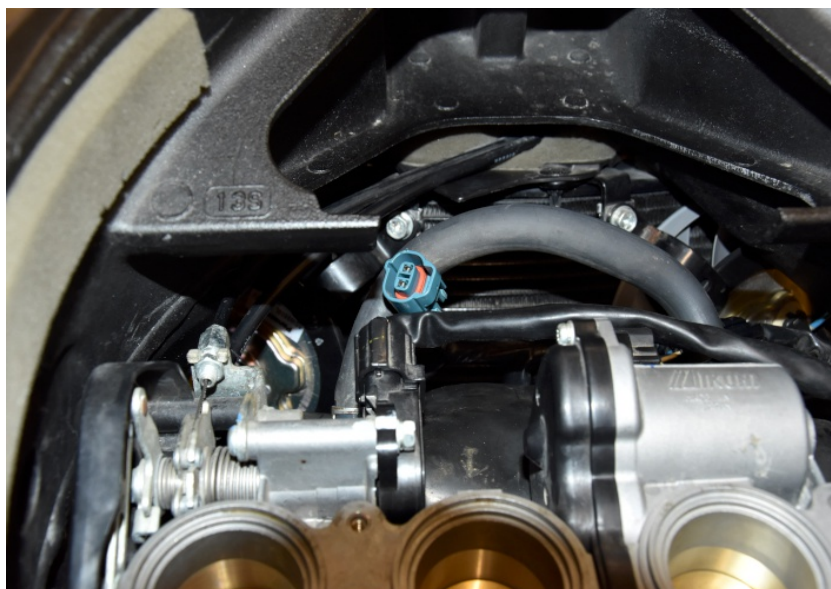

PS Eliminator Supplementary Manual



Yamaha YZF-R6 2006-2016 (PSE-01)

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

