

PS Eliminator Supplementary Manual



Yamaha FZ-1 2006-2014 (PSE-02)

Secure the bike on a stand.



Remove the seats.

Remove the plastic cover from the fuel tank.

Remove the fuel tank and the airbox.



Locate the stock PAIR (clean air) valve and unplug the connector.

(Transparent, 2-pole connector under the airbox.)



PS Eliminator Supplementary Manual



Yamaha FZ-1 2006-2014 (PSE-02)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

