

## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2A

REMOVE THE SEAT AND THE SIDE FAIRINGS.



REMOVE OR LIFT UP THE FUEL TANK.



REMOVE THE AIRBOX.






## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2A

CONNECT THE QSH CONNECTORS
IN-LINE WITH THE INJECTOR
CONNECTORS.



CONNECT THE QSH BLACK WIRE TERMINAL TO THE BATTERY NEGATIVE TERMINAL.

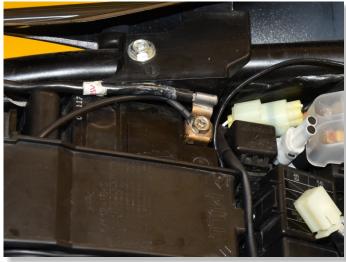

## MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
TIGHTEN THE BOLT IN THIS POSITION BY
ABOUT 5-6 NM.
IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)







## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2A

TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.

