

## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2D

REMOVE THE SEAT.



LIFT UP OR REMOVE THE FUEL TANK.



LOCATE THE FUEL INJECTOR
CONNECTORS.

(BLACK, Z-POLE CONNECTORS UNDER THE AIRBOX.)





## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2D

PLUG THE QSH CONNECTORS IN-LINE WITH THE FUEL INJECTOR CONNECTORS.



CONNECT THE QSH BLACK WIRE TERMINAL TO THE NEGATIVE TERMINAL OF THE BATTERY.



BEFORE MOUNING THE QSE SENSOR INSTALL THE SENSOR COMPONENTS IN THE FOLLOWING ORDER:

- BOLT HEAD -
- SENSOR -
- SPACER -





## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2D

## MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED. TIGHTEN THE BOLT IN THIS POSITION BY ABOUT 5-6 Nm. IF YOU DO NOT HAVE

A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS,

REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE MODULE PROPERLY.

