

Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats and the side fairings.

Remove the fuel tank cover and remove the fuel tank.



Locate the ignition coil terminals under the fuel tank on the right side.



QuickShifter easy Supplementary Manual




Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Take off the Yellow/White terminal from the coil.


Connect the QSH Green terminal to this coil terminal.

Connect the Yellow/White terminal to the QSH Red wire terminal and secure with tape.

Isolate the unused QSH Green terminal with tape.

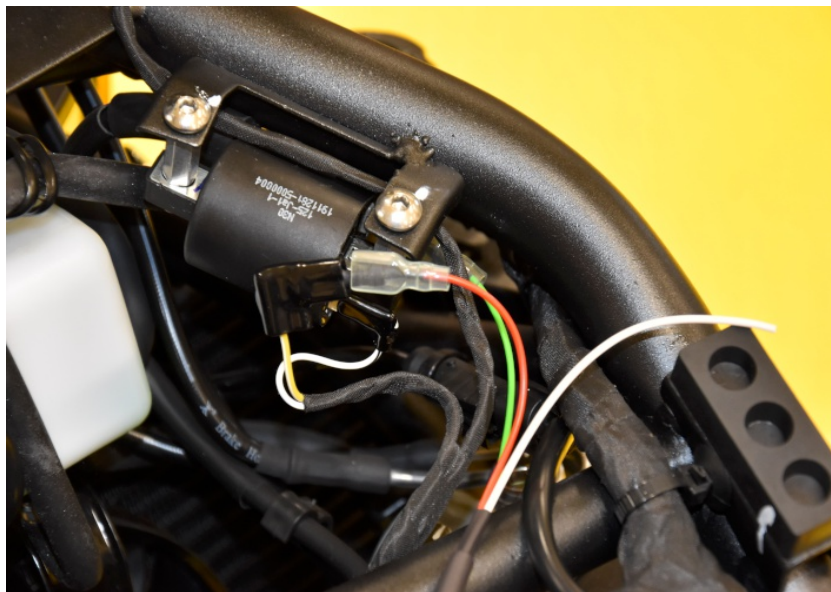

Splice the QSH White wire to the White/Black wire of the coil by using the supplied red wire tap connector.

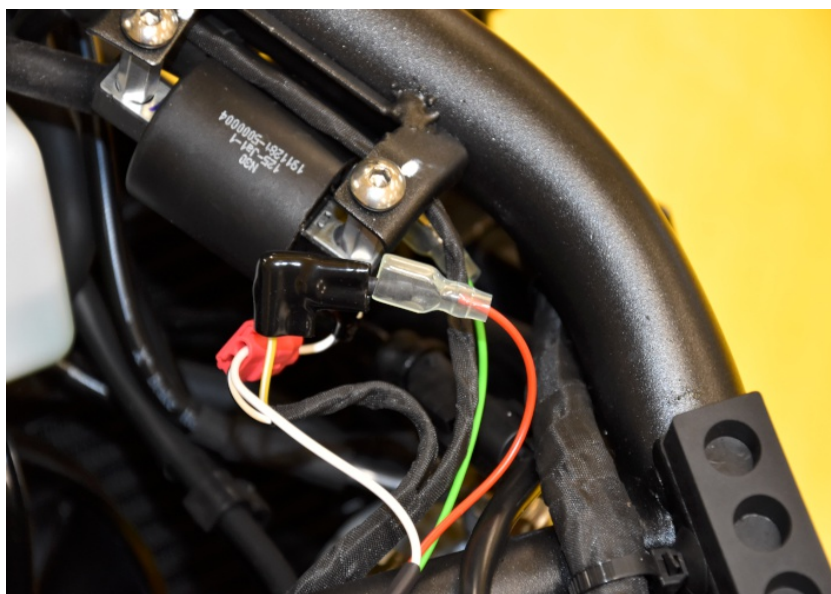

Connect the QSH Black wire terminal to the battery negative terminal.



QuickShifter easy Supplementary Manual



Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Tighten the bolt in this position by about 6
Nm. If you do not have torque wrench,
tighten the bolt until the shift arm is tight
on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

