

SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2T

REMOVE THE SEAT AND THE SIDE FAIRINGS.



REMOVE THE CLAMPS AT THE FRONT SIDE OF THE FUEL TANK.



REMOVE THE FUEL TANK AND LOCATE THE IGNITION COIL TERMINALS ON THE RIGHT SIDE.





SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2T

TAKE OFF THE YELLOW/RED TERMINAL FROM ONE COIL.

CONNECT THE QSH GREEN TERMINAL TO THIS COIL TERMINAL.


CONNECT THE YELLOW/RED TERMINAL TO THE QSH RED WIRE TERMINAL AND SECURE WITH TAPE.



TAKE OFF THE YELLOW/RED TERMINAL FROM THE 2ND COIL.

CONNECT THE QSH GREEN TERMINAL TO THIS COIL TERMINAL.


ISOLATE THE UNUSED YELLOW/RED TERMINAL WITH TAPE.

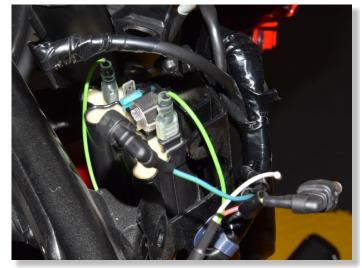

SPLICE THE QSH WHITE WIRE TO THE GREEN/BLUE WIRE OF THE COIL BY USING THE SUPPLIED RED WIRE TAP CONNECTOR.

CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

(REFET TO THE QSH-P2T INSTRUCTIONS.)

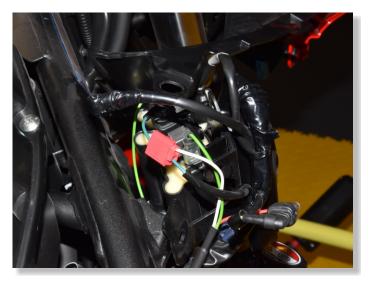



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2T

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
TIGHTEN THE BOLT IN THIS POSITION BY
ABOUT 5-6 NM.
IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE MODULE PROPERLY.

