

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2T

REMOVE THE MAIN SEAT.



LIFT UP OR REMOVE THE FUEL TANK.




TAKE OFF THE RED/BLACK TERMINAL FROM ONE COIL.

CONNECT THE QSH GREEN TERMINAL TO THIS COIL TERMINAL.






CONNECT THE RED/BLACK TERMINAL TO THE QSH RED WIRE TERMINAL AND SECURE WITH TAPE.

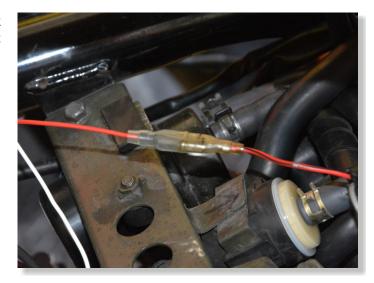

TAKE OFF THE RED/BLACK TERMINAL FROM THE 2ND COIL.

CONNECT THE QSH GREEN TERMINAL TO THIS COIL TERMINAL.

ISOLATE THE UNUSED BLACK/WHITE TERMINAL WITH TAPE.

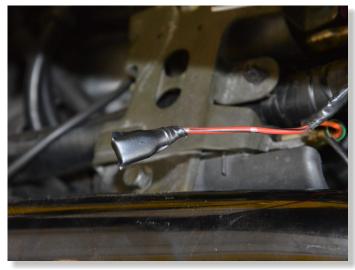

SPLICE THE QSH WHITE WIRE TO THE GRAY WIRE OF THE COIL BY USING THE SUPPLIED RED WIRE TAP CONNECTOR.

(REFER TO THE QSH-P2T INSTRUCTIONS)





CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.



MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D).
TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5-6 NM.
IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

