





SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A

REMOVE THE SEATS.

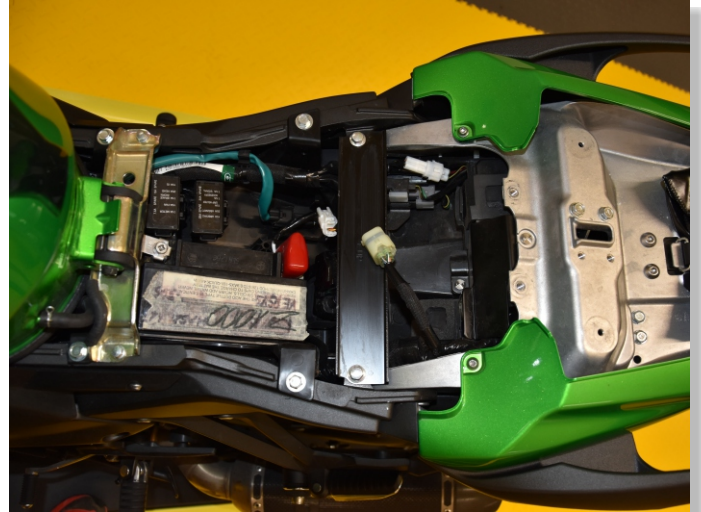

REMOVE THE FUEL TANK.

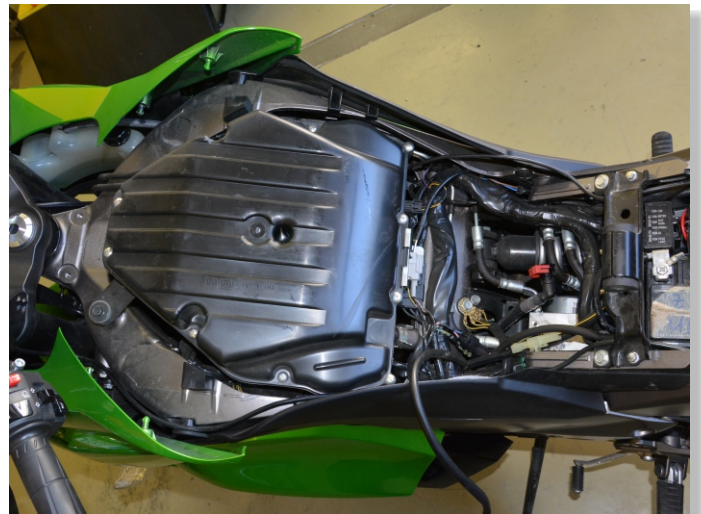

REMOVE THE SIDE FAIRINGS.






SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A


REMOVE THE AIRBOX.



**PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.**
(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)

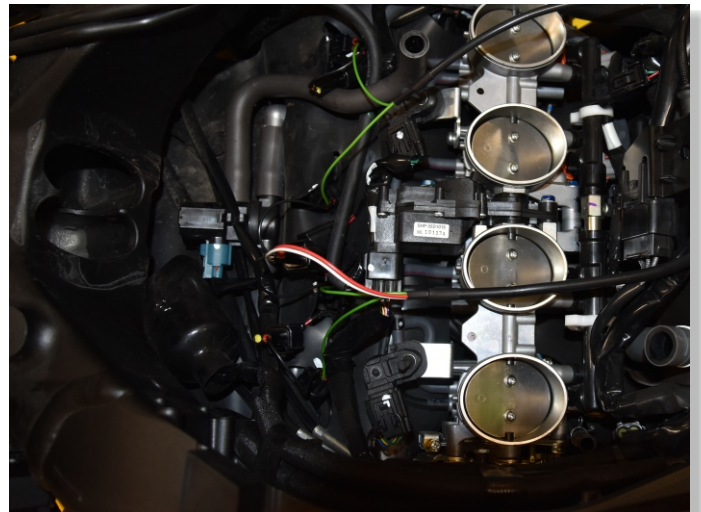

**CONNECT QSH BLACK WIRE
TERMINAL TO THE BATTERY
NEGATIVE TERMINAL.**

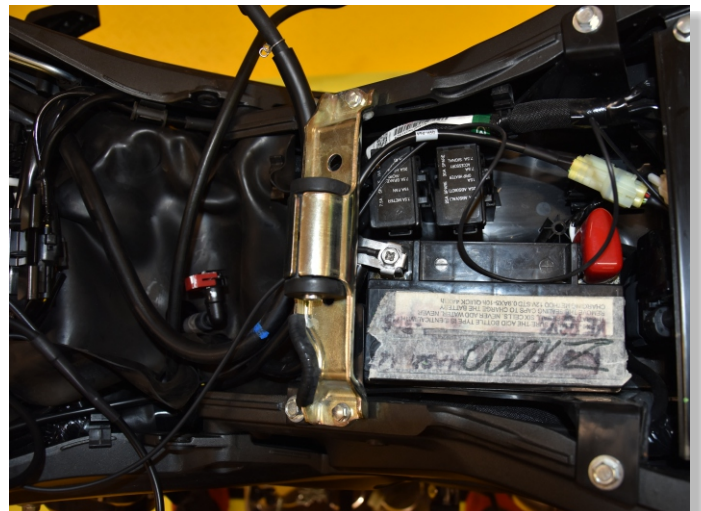




SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
TIGHTEN THE BOLT IN THIS POSITION BY
ABOUT 5-6 NM.

IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)

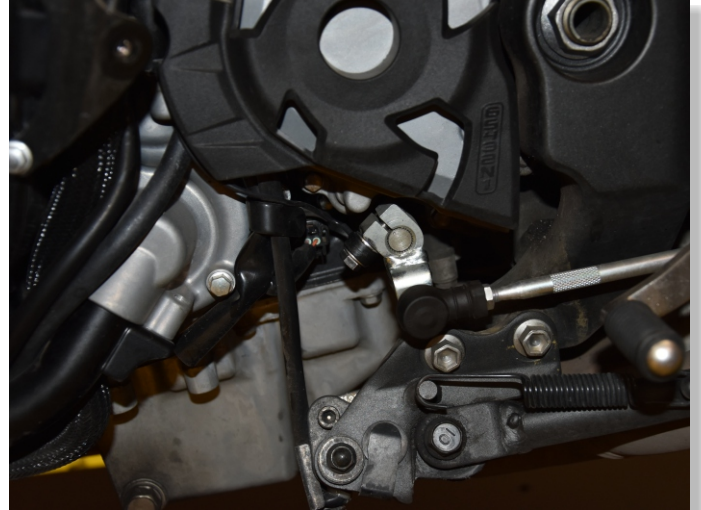

TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE MODULE PROPERLY.

