

Kawasaki ZX-10R 2004-2005 (iQSE-1 + QSH-P4A)

Remove the passanger seat.



Remove the cover between the seats.




Remove the main seat.



QuickShifter easy Supplementary Manual

Kawasaki ZX-10R 2004-2005 (iQSE-1 + QSH-P4A)


Remove the frame covers below the fuel tank and the main seat.

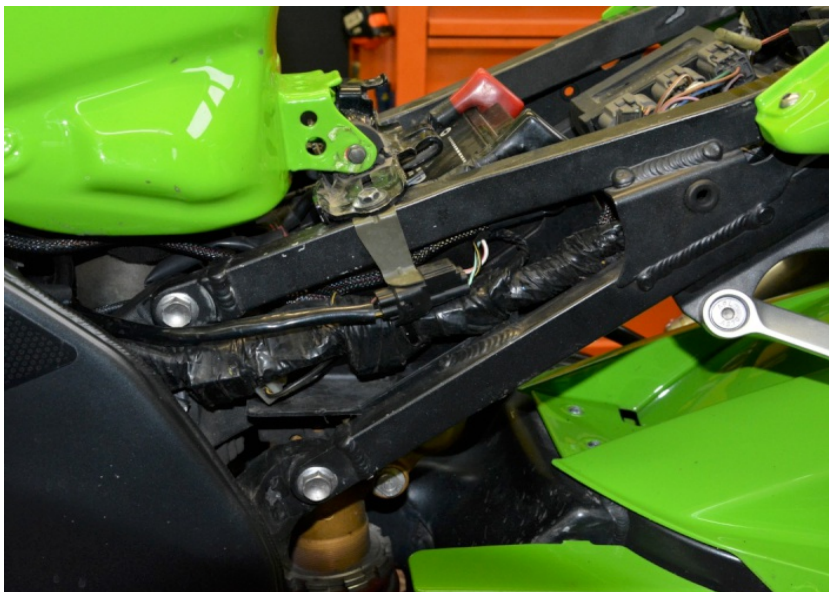

Remove the fuel tank.



Remove the airbox.

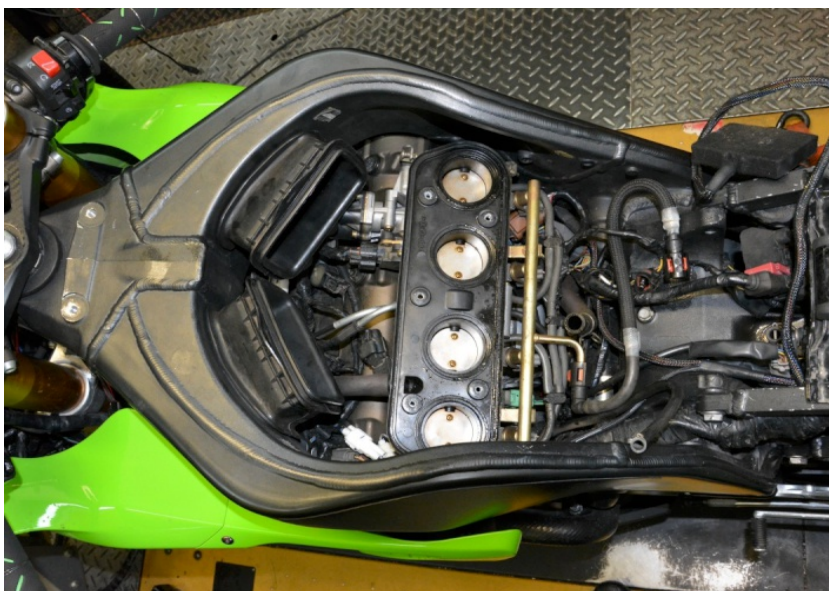

QuickShifter easy Supplementary Manual



Kawasaki ZX-10R 2004-2005 (iQSE-1 + QSH-P4A)


Plug the QSH connectors in-line with the ignition coil connectors.

(Black, 2-pole connectors below the airbox)




Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)

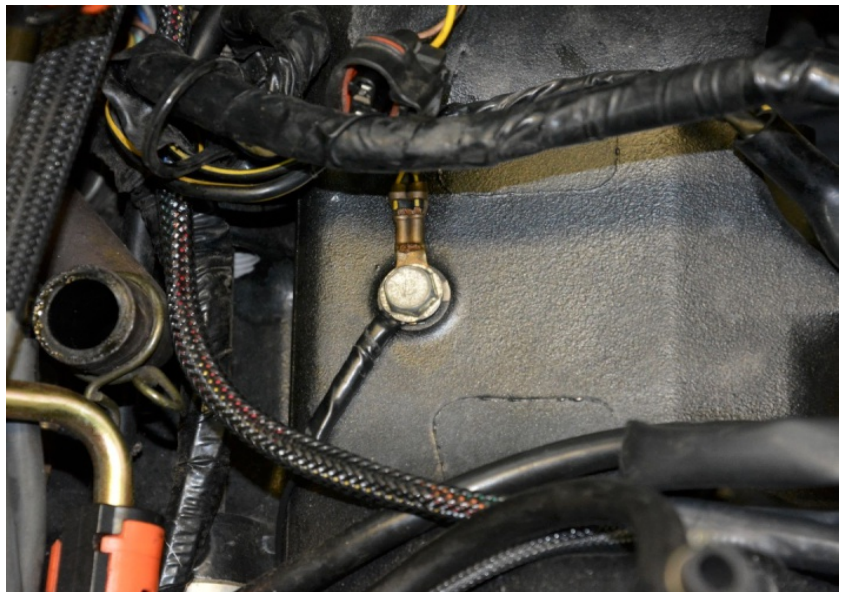

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

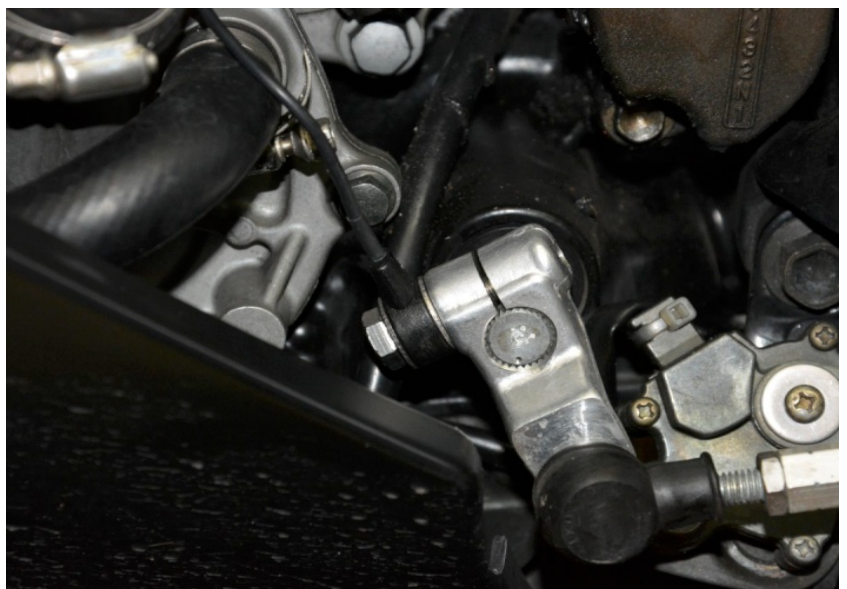

QuickShifter easy Supplementary Manual



Kawasaki ZX-10R 2004-2005 (iQSE-1 + QSH-P4A)

Typical position for the QuickShifter easy.

Secure the unit properly.

