


QuickShifter easy Supplementary Manual

Kawasaki ZX-6R Ninja 2005-2006 (iQSE-1 + QSH-P4A)

Remove the black frame covers below
the main seat.



Remove the main seat.

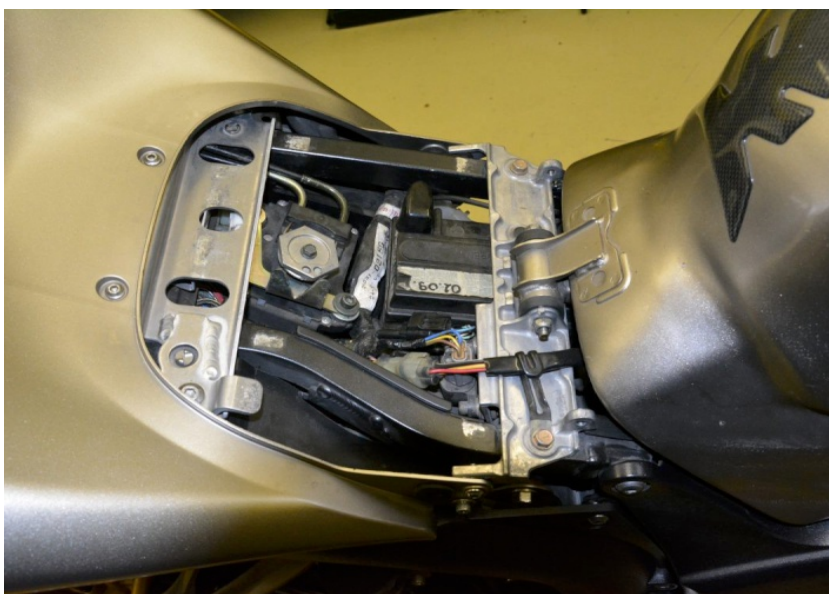

Remove the fuel tank.




QuickShifter easy Supplementary Manual



Kawasaki ZX-6R Ninja 2005-2006 (iQSE-1 + QSH-P4A)

Remove the airbox.

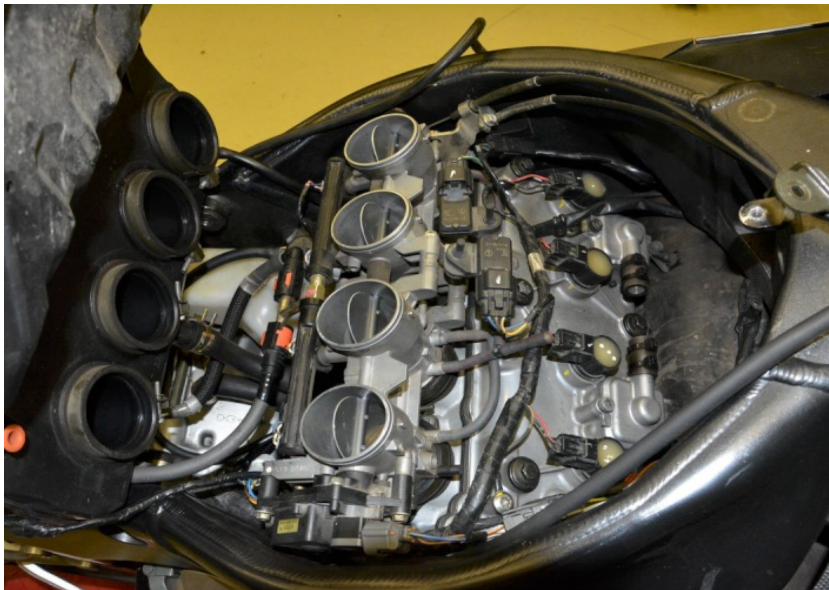


Plug the QSH connectors in-line with the ignition coil connectors.

(Black, 2-pole connectors below the airbox)



Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)

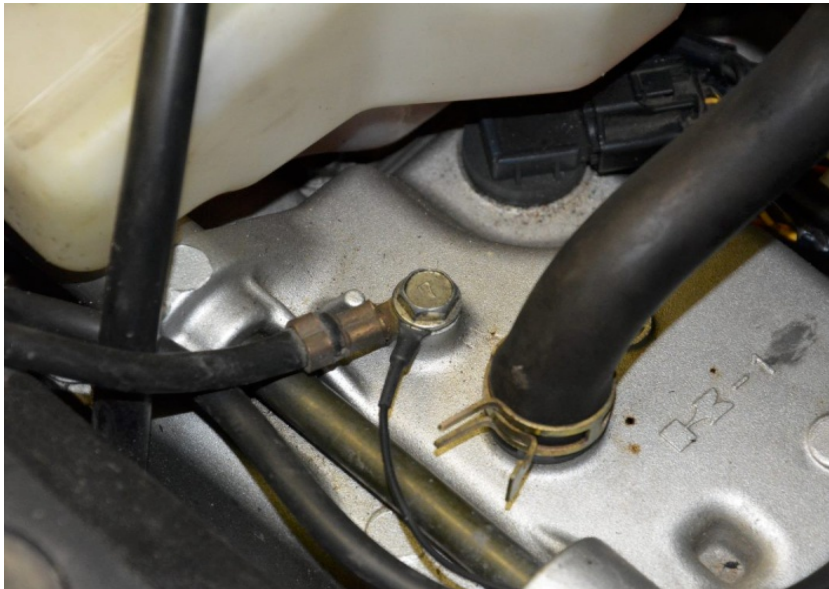

QuickShifter easy Supplementary Manual



Kawasaki ZX-6R Ninja 2005-2006 (iQSE-1 + QSH-P4A)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

