




SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

REMOVE THE SEAT.



REMOVE THE LEFT AND RIGHT SIDE COVERS UNDER THE SEAT.

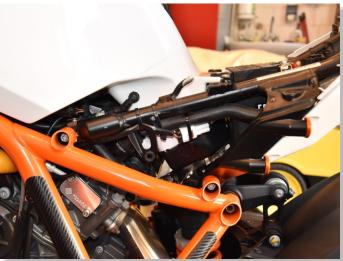

REMOVE THE FUEL TANK.








SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

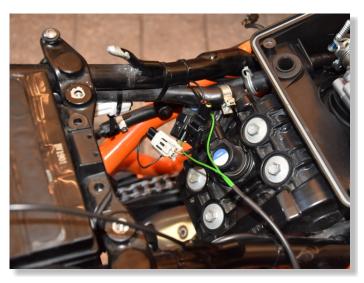

CONNECT THE QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

CONNECT THE QSH BLACK WIRE TERMINAL TO THE BATTERY NEGATIVE TERMINAL.





MOUNT THE QSE SENSOR.

(Place the sensor in the rod as shown. Use the washers supplied at both sides of the sensor. Tighten the nut by hand fully and then by a 1/4 turn using a wrench.)



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.



AN IQSE INSTALL VIDED IS AVAILABLE HERE.