


## Aprilia RSV4 2009-2016 (iQSE-1 + QSH-P4F)

Remove the seats.

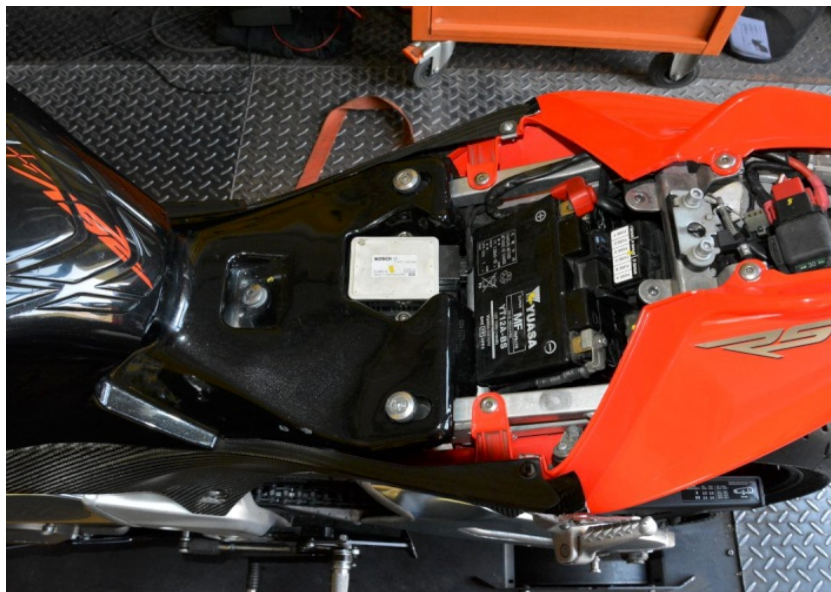

Remove the frame covers below the fuel tank.



Lift up or remove the fuel tank.



# QuickShifter easy Supplementary Manual



## Aprilia RSV4 2009-2016 (iQSE-1 + QSH-P4F)

Connect the QSH connectors in-line with the ignition coil connectors on left side.

*(Black, 3-pole connectors on the front cylinders)*



Connect the QSH connectors in-line with the ignition coil connectors on right side.

*(Black, 3-pole connectors on the front cylinders)*



Connect the QSH connectors in-line with the ignition coil connectors on the airbox.

*(Black, 3-pole connectors from the rear cylinders)*





# QuickShifter easy Supplementary Manual



## Aprilia RSV4 2009-2016 (iQSE-1 + QSH-P4F)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the conical washers at the two sides  
of the sensor like this: (O). Tighten the bolt  
in this position by about 6 Nm. If you do not  
have torque wrench, tighten the bolt until  
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

