


Suzuki B-King 2008-2012 (iQSE-1 + QSX-P4B)

Remove the main seat.



Remove the chrome fuel tank upper cover.

Remove the left and right indicator covers from the fuel tank.

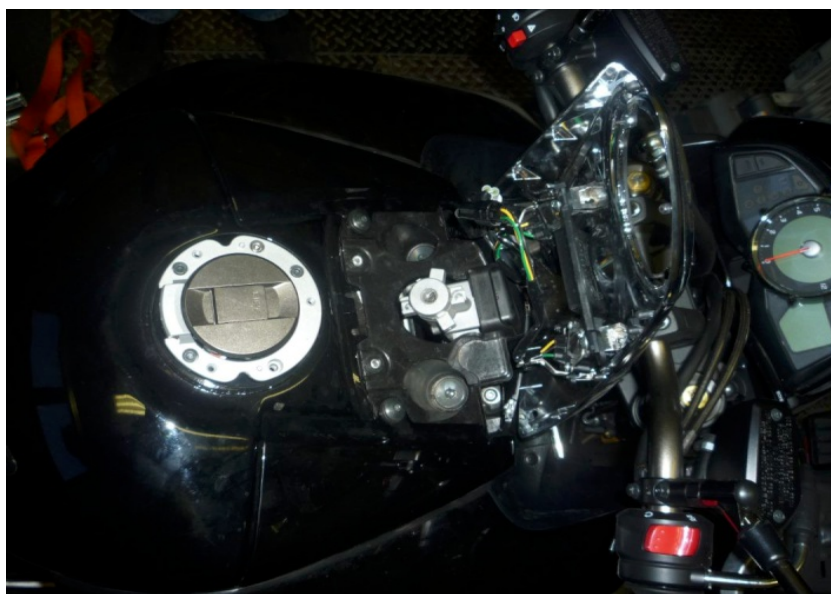

Remove the left and right black frame covers from the fuel tank.



QuickShifter easy Supplementary Manual




Suzuki B-King 2008-2012 (iQSE-1 + QSX-P4B)

Remove the fuel tank.



Remove the airbox.

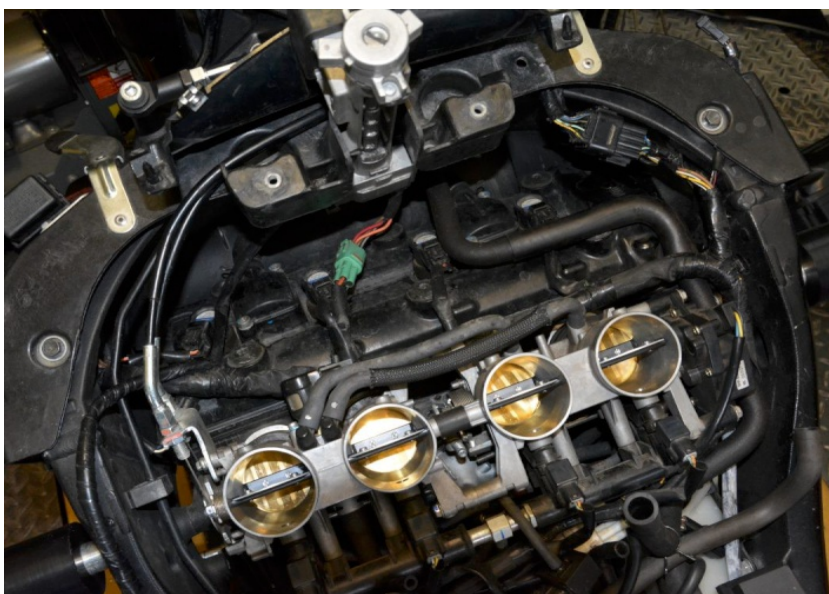

Plug the QSX connectors in-line with the
ignition coil connectors.

(Black, 2-pole connectors below the airbox)



QuickShifter easy Supplementary Manual



Suzuki B-King 2008-2012 (iQSE-1 + QSX-P4B)

Connect the QSX Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (O). Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

