SpeedoHealer

Supplementary Manual



MV Agusta Brutale 1078 2008 (SH-V4 + SH-D01)

Secure the bike on a stand.



Remove the seats and the side fuel tank covers.


Remove the ignition switch cover.

Remove the fuel tank.



Locate the vehicle speed sensor connectors.

(Black, 3-pole connectors on the left side next to the side stand)

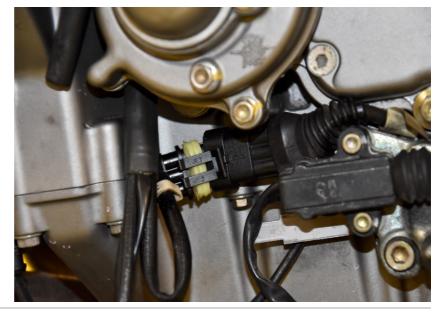


SpeedoHealer

Supplementary Manual



MV Agusta Brutale 1078 2008 (SH-V4 + SH-D01)

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

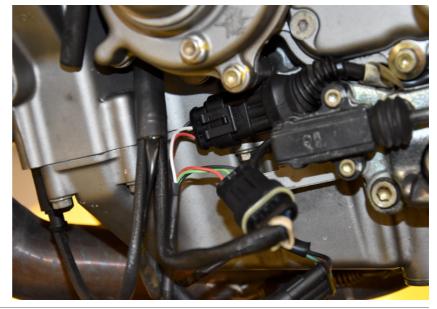

Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

