## SpeedoHealer

# Supplementary Manual



#### Benelli Leoncino 500 ABS 2017- (SH-V4 + SH-U01)

Secure the bike on a stand.




Remove the seat.

Remove the black plastic cover from the fuel tank.

Remove the fuel tank.



Locate the ABS connector under the seat.

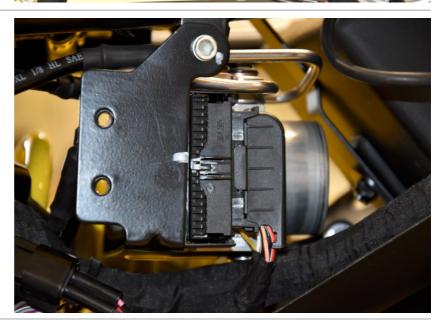

#### SpeedoHealer


## Supplementary Manual




#### Benelli Leoncino 500 ABS 2017- (SH-V4 + SH-U01)

Cut the Blue/Purple wire.

Connect the SpeedoHealer Green wire to the Blue/Purple wire end, which is at the wiring harness side.

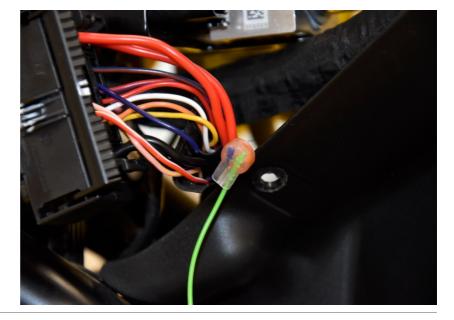


Connect the SpeedoHealer White wire to the Blue/Purple wire end, which goes to the ABS connector.

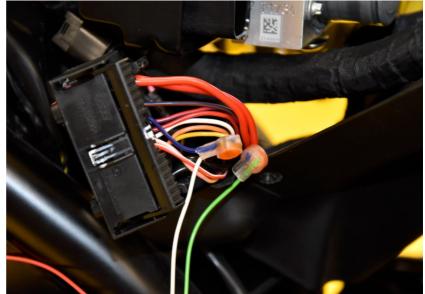

Splice the SpeedoHealer Red wire to the Red/White wire of the rollover sensor.

(Black, 3-pole connector next to the ABS ECU)

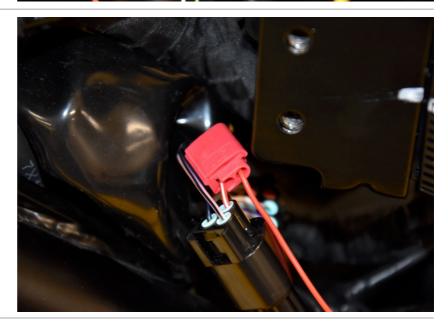

### SpeedoHealer

# Supplementary Manual



#### Benelli Leoncino 500 ABS 2017- (SH-V4 + SH-U01)

Splice the SpeedoHealer Black wire to the Black/Blue wire of the rollover sensor.

(Black, 3-pole connector next to the ABS ECU)



Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

