

Benelli TRK 502 2017- (SH-V4 + SH-U01)

Remove the seats.



Remove the side black plastic covers.




Unplug the ABS ECU connector.

(Black, 18 pole connector under the fuel tank, next to the ABS unit.)




Benelli TRK 502 2017- (SH-V4 + SH-U01)

Cut the Blue/Purple wire from the ABS ECU connector.

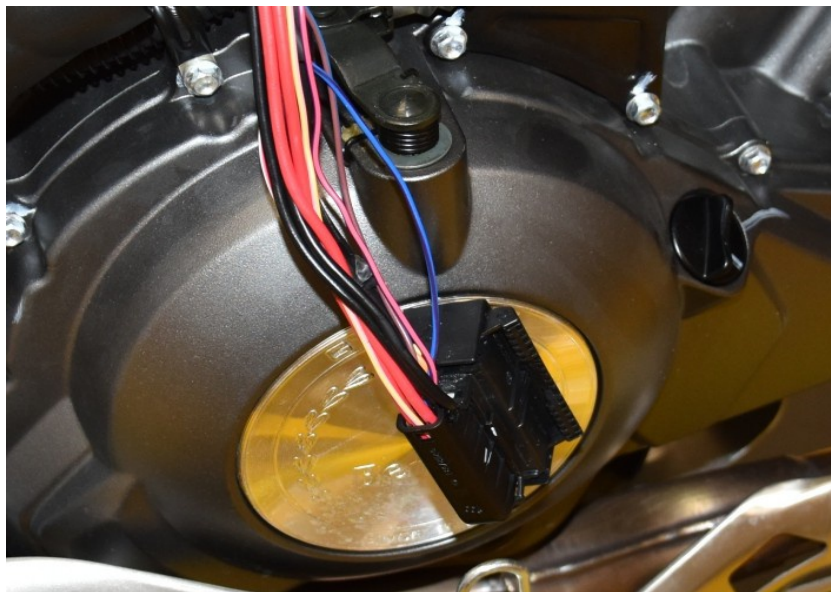


Connect the SpeedoHealer White wire to the Blue/Purple wire end, which is at the ABS connector side.

Connect the SpeedoHealer Green wire to the Blue/Purple wire end, which is at the wiring harness side.

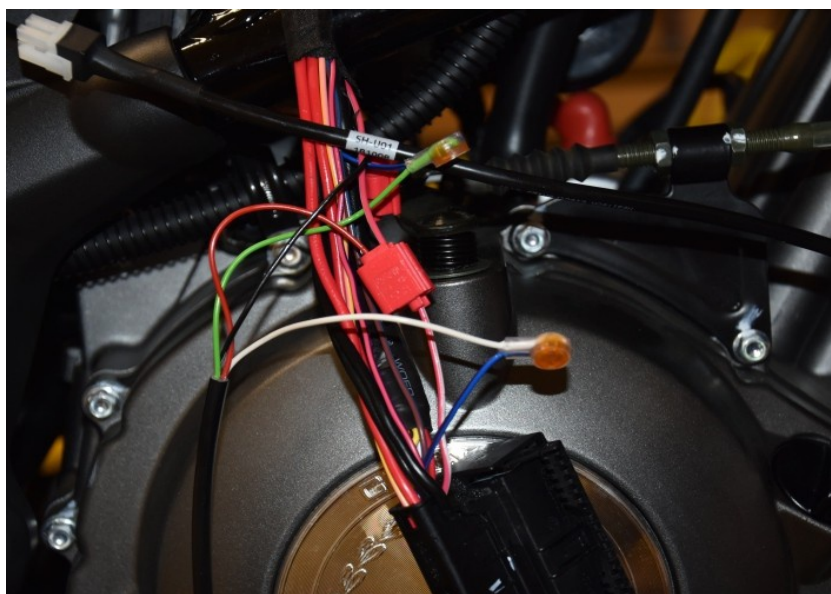

Splice the SpeedoHealer Red wire to the Pink/White wire.

Splice the SpeedoHealer Black wire to the Black wire.

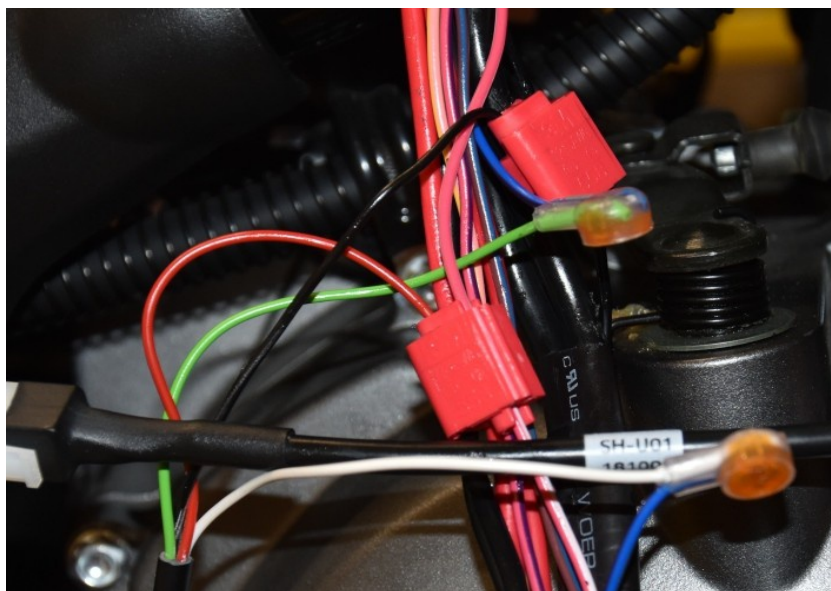

Benelli TRK 502 2017- (SH-V4 + SH-U01)

Typical position for the SpeedoHealer.

Secure the unit properly.

