

Honda NC750 (DCT version)

2014-

SUPPLEMENTARY MANUAL

for SH-U01

Here is how to make it work without affecting the shifts.
All connections take place at the dashboard connector.

- 1) Cut the **Pink/Green** wire, about 4 cm away from the dash connector, then:
- 2) **SH Green** wire: connect to the Pink/Green at the dash connector side
- 3) **SH White** wire: connect to the Pink/Green at wiring harness side
- 4) **SH Red** wire: tap the **Pink/Blue** wire
- 5) **SH Black** wire: tap the **Green/Red** wire

When the installation is done, do the SH signal test procedure as follows:

- Have the ignition key OFF.
- Press SEL and keep it depressed while you turn the ignition ON.
[t] (test) is now indicated. Release the button.
Check: The speedometer should indicate a steady number other than 0.
- Move the bike back and forth so both wheels are turning.
Check: [t] should be blinking as the wheels turn.

Note: [t] appears on the display like an [E] without the top horizontal bar.