

Kawasaki ZX-4RR ABS TC 2024- (SH-V4-C + SH-U01)

Secure the bike on a stand.



Remove the seats.

Remove the fuel tank.




Locate the ECU connectors and unplug it.




Kawasaki ZX-4RR ABS TC 2024- (SH-V4-C + SH-U01)

Cut the Pink wire.


Connect the SpeedoHealer Green wire to the Pink wire end, which is at the wiring harness side.

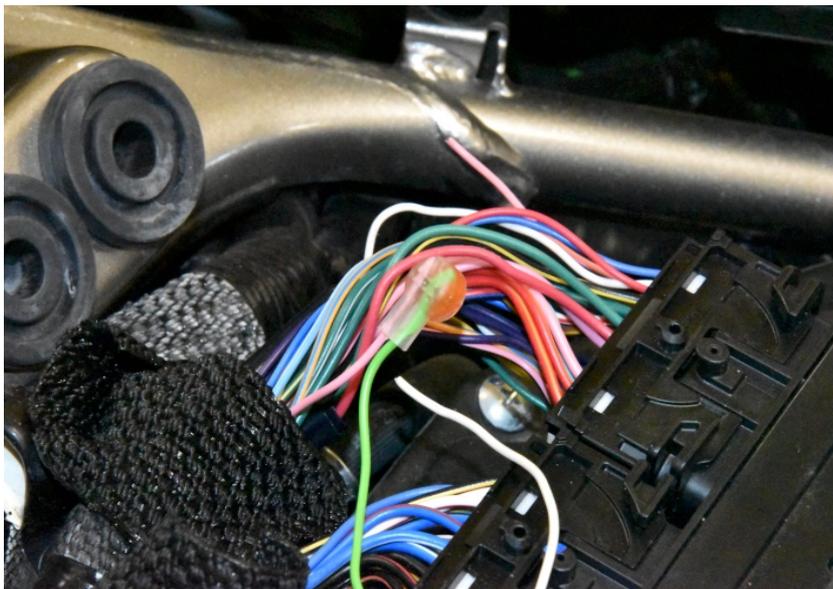

Connect the SpeedoHealer White wire to the Pink wire end, which is at the ECU connector side.

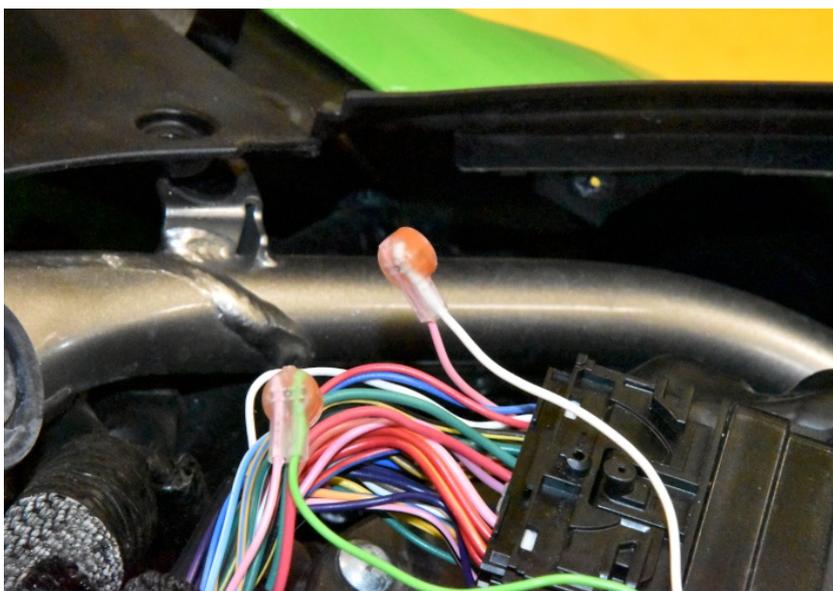


Splice the SpeedoHealer Red wire to the White/Red wire.

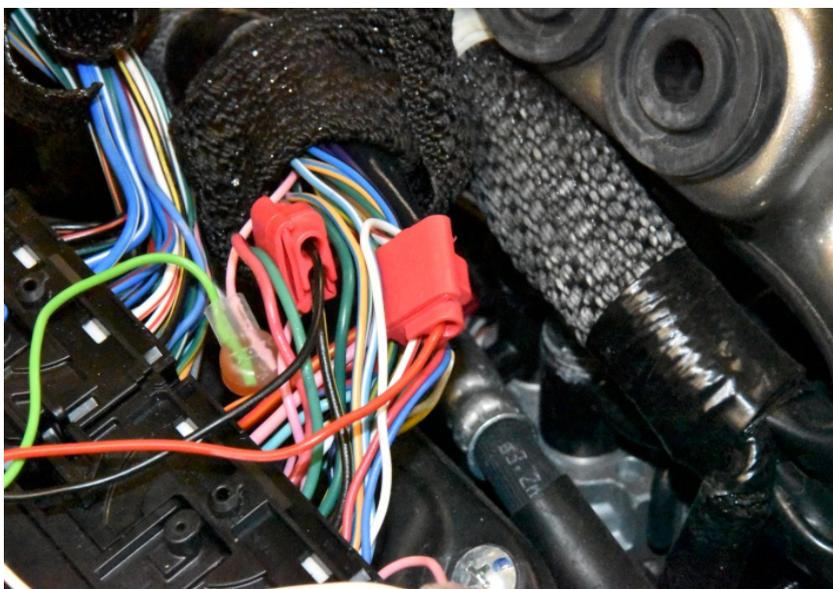

Kawasaki ZX-4RR ABS TC 2024- (SH-V4-C + SH-U01)

Splice the SpeedoHealer Black wire to the Black/Yellow wire.

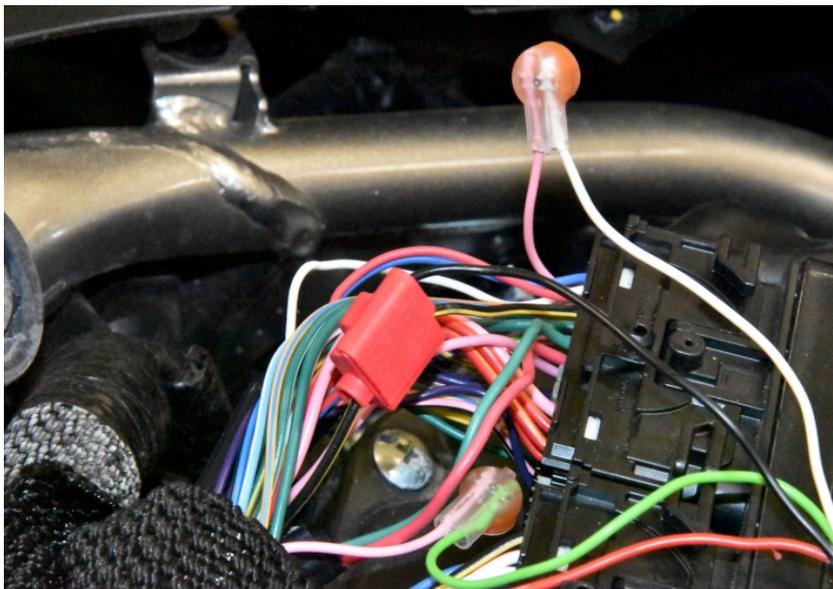

Typical position for the SpeedoHealer.

Secure the unit properly.

