

Yamaha YZF-R1 2007-2008 (SH-V4 + SH-Y01)

Remove the main seat.



Remove the black fuel tank covers.

Lift up or remove the fuel tank.



Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

(Black and white, 3-pole connectors at the right side below the fuel tank)



Yamaha YZF-R1 2007-2008 (SH-V4 + SH-Y01)

Typical position for the SpeedoHealer.

Secure the unit properly.

