

# SpeedoHealer

## Supplementary Manual



### Yamaha YZF-R1 2004-2005 (SH-V4 + SH-Y01)

Secure the bike on a stand.

Remove the seats.

Remove the fuel tank covers.

Lift up or remove the fuel tank.



Locate the vehicle speed sensor connectors.

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

*(White, 3-pole connectors under the fuel tank)*



Typical position for the SpeedoHealer.

Secure the unit properly.

