Shift Light proSupplementary Manual



Yamaha MT-07 /FZ-07 2014- (SLP-U01)

Remove the headlight assembly.



Remove the fairing around the fuel tank and the plastic cover on the right side.



Connect the SLP Black/Green wire to the Grey wire at the ECU connector.



Shift Light proSupplementary Manual



Yamaha MT-07 /FZ-07 2014- (SLP-U01)

Locate the 2-pole auxiliary light connector behind the headlight assembly.

Connect the SLP Red wire to the Blue/Red wire of the auxiliary light connector.

Connect the SLP Black wire to the Black wire of the auxiliary light connector.



Typical position for the Shift Light pro.

Secure the unit properly.

