

# STV Eliminator

## Supplementary Manual

### Kawasaki ZX-6R ABS TC 2019- (STVE-08)

Secure the bike on a stand.



Remove the seat.


Remove the covers from the fuel tank.

Remove the fuel tank and the airbox.



Locate the throttle body assembly under the airbox.

Find the two connectors of the actuator motor and the STPS (secondary throttle position sensor) on the throttle body assembly.

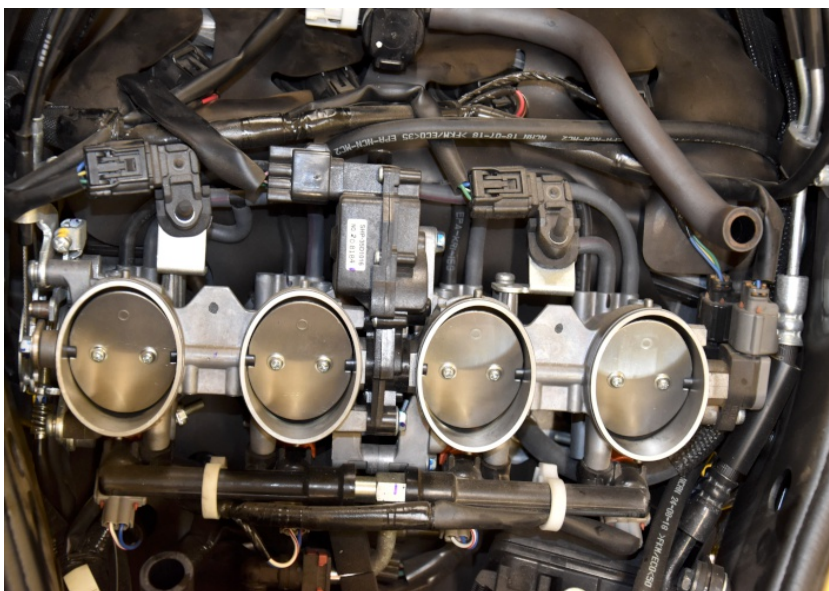

# STV Eliminator

## Supplementary Manual



### Kawasaki ZX-6R ABS TC 2019- (STVE-08)

Remove the butterfly valve flaps/throttle plates.

Plug the STVE module into the 4-pole Black wiring harness connector.

Plug the STVE module into the 3-pole Grey wiring harness connector.



Typical position for the STV Eliminator.

Secure the unit properly.

