

STV Eliminator Supplementary Manual

Kawasaki ZX-6R Ninja 2009-2012 (STVE-08)

Remove the fuel tank.



Remove the airbox.



Locate the throttle body assembly under the airbox.

Find and unplug the two connectors of the actuator motor and the STPS (secondary throttle position sensor) on the throttle body assembly.

Remove the butterfly valve flaps/throttle plates.



STV Eliminator Supplementary Manual




Kawasaki ZX-6R Ninja 2009-2012 (STVE-08)

Plug the STVE module into the 4-pole black wiring harness connector.



Plug the STVE module into the 3-pole gray wiring harness connector.

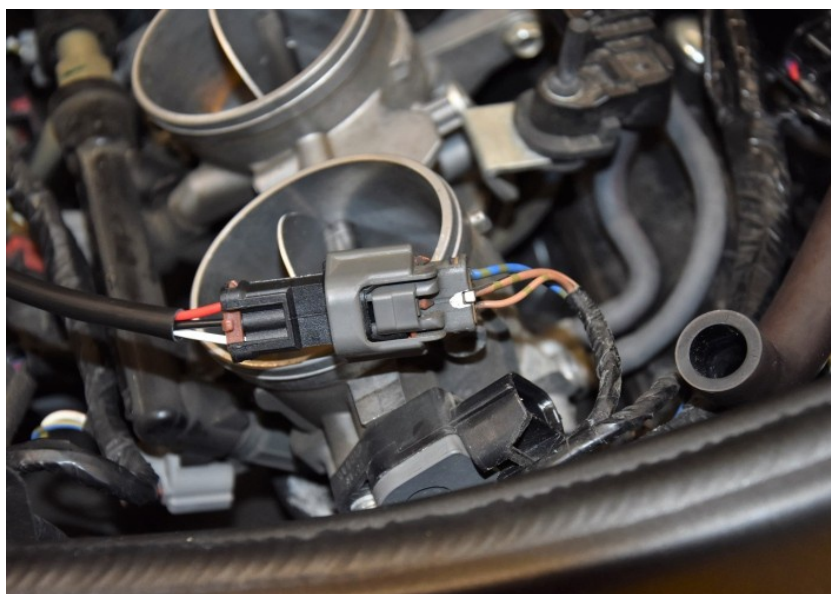

Typical position for the STVE.

Secure the unit properly.

