

STV Eliminator

Supplementary Manual

Kawasaki ZX-6R 2007-2017 (STVE-08)

Secure the bike on a stand.



Remove the black frame covers below the main seat.


Remove the seats.

Lift up or remove the fuel tank and remove the airbox.



Locate the throttle body assembly under the airbox.

Find the two connectors of the actuator motor and the STPS (secondary throttle position sensor) on the throttle body assembly.

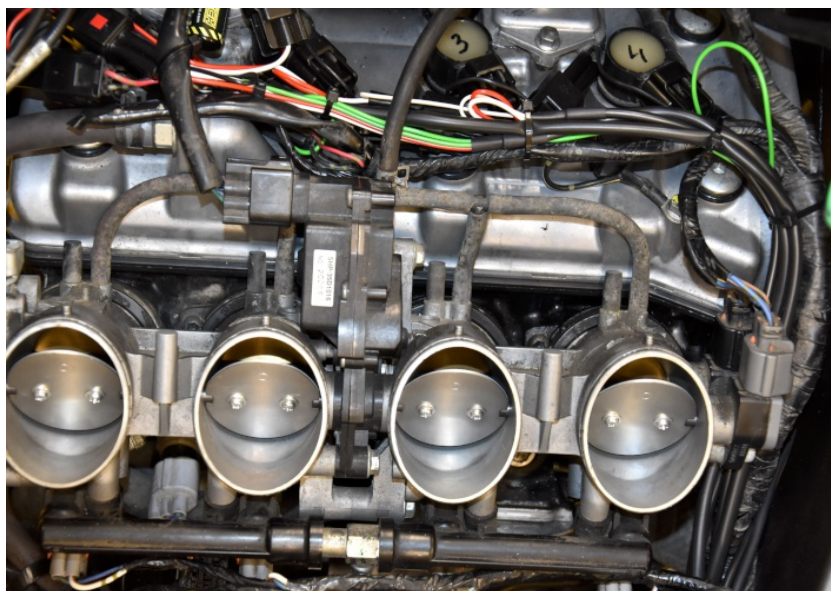

STV Eliminator

Supplementary Manual




Kawasaki ZX-6R 2007-2017 (STVE-08)

Remove the butterfly valve flaps/throttle plates.

Plug the STVE module into the 4-pole Black wiring harness connector.

Plug the STVE module into the 3-pole Grey wiring harness connector.

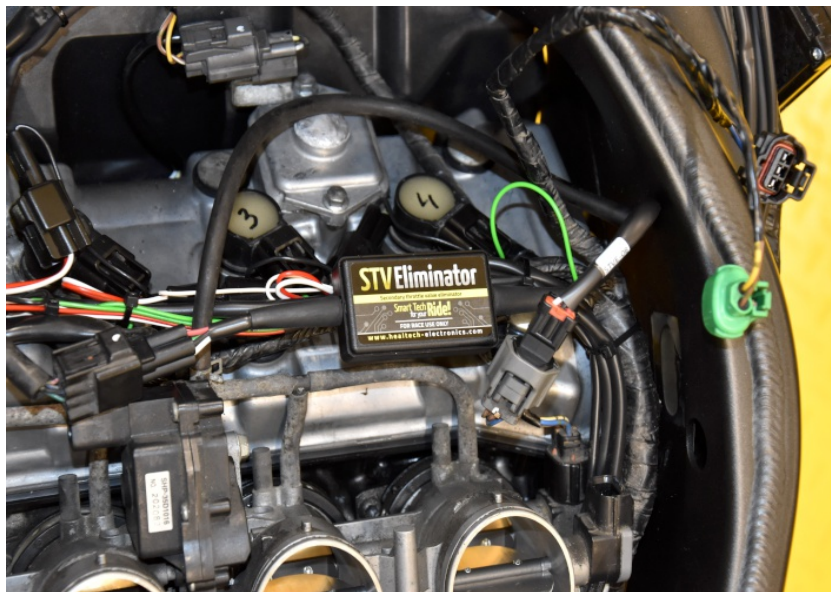

Typical position for the STV Eliminator.

Secure the unit properly.

